

## OPERATION AND MAINTENANCE SMALL HEATING SYSTEMS

### Table of Contents

	Paragraph	Page
CHAPTER 1. INTRODUCTION		
Purpose and scope . . . . .	1-1	1-1
References . . . . .	1-2	1-1
Abbreviations and terms . . . . .	1-3	1-1
Organization and responsibility . . . . .	1-4	1-1
Systems overview . . . . .	1-5	1-1
Energy conservation policy . . . . .	1-6	1-2
Chapter 2. FUELS		
Section I. Coal		
General . . . . .	2-1	2-1
Section II. Fuel Oils		
General . . . . .	2-2	2-1
Classification of fuel oils . . . . .	2-3	2-1
Oil tanks . . . . .	2-4	2-2
Section III. Natural Gas		
General . . . . .	2-5	2-3
Gas handling and storage . . . . .	2-6	2-3
Gas handling precautions . . . . .	2-7	2-4
Section IV. Liquefied Petroleum Gas		
General . . . . .	2-8	2-4
Characteristics . . . . .	2-9	2-4
Specifications . . . . .	2-10	2-4
LPG storage and handling . . . . .	2-11	2-4
CHAPTER 3. FUEL BURNING EQUIPMENT		
Section I. Coal Stokers		
General . . . . .	3-1	3-1
Single-retort underfeed stokers . . . . .	3-2	3-1
Operation . . . . .	3-3	3-1
Inspection and maintenance procedures . . . . .	3-4	3-2
Troubleshooting underfeed stokers . . . . .	3-5	3-2
Section II. Hand-Fired Coal Burners		
General . . . . .	3-6	3-2
Furnace types . . . . .	3-7	3-2
Operation . . . . .	3-8	3-4
Section III. Oil Burners		
General . . . . .	3-9	3-5
Burner descriptions . . . . .	3-10	3-5
Ignition procedures . . . . .	3-11	3-9
Oil burner operation . . . . .	3-12	3-10
Inspection and maintenance of oil burners . . . . .	3-13	3-10
Fuel oil piping . . . . .	3-14	3-13
Section IV. Gas Burners		
General . . . . .	3-15	3-16
Burner types with descriptions . . . . .	3-16	3-16
Operation procedures . . . . .	3-17	3-16
Starting procedures . . . . .	3-18	3-18
Inspection and maintenance . . . . .	3-19	3-19

---

\*This manual supercedes TM 5-642, Jun 46 and rescinds TM 5-644, Jul 46 and TM 5-646, Jun. 46

	Paragraph	Page
Section V. Dual Fuel (Oil/Gas) Burners		
General . . . . .	3-20	3-21
Operation . . . . .	3-21	3-21
Inspection and maintenance . . . . .	3-22	3-21
Section VI. Energy Conservation		
Adjustments to excess air . . . . .	3-23	3-21
CHAPTER 4. STEAM HEATING SYSTEMS		
General . . . . .	4-1	4-1
Section I. Description of Systems		
General . . . . .	4-2	4-1
Gravity one-pipe air vent system . . . . .	4-3	4-1
Two-pipe vapor system with return trap . . . . .	4-4	4-4
Two-pipe vapor system with condensate pump . . . . .	4-5	4-5
Two-pipe vacuum system with vacuum pump . . . . .	4-6	4-6
Section II. Boiler Types		
Cast iron boilers . . . . .	4-7	4-8
Steel boilers . . . . .	4-8	4-11
Fire-tube boilers . . . . .	4-9	4-11
Water-tube boilers . . . . .	4-10	4-13
Initial operation and cleaning . . . . .	4-11	4-14
Special maintenance requirements . . . . .	4-12	4-14
Section III. Boiler Headers, Valves and Piping Connections		
Installation . . . . .	4-13	4-15
Maintenance . . . . .	4-14	4-15
Section IV. Boiler Return Traps		
Installation . . . . .	4-15	4-15
Initial operation . . . . .	4-16	4-18
Maintenance . . . . .	4-17	4-18
Typical operating difficulties . . . . .	4-18	4-18
Section V. Condensate Pumps		
General . . . . .	4-19	4-18
Installation . . . . .	4-20	4-18
Operation . . . . .	4-21	4-19
Maintenance . . . . .	4-22	4-20
Typical operating difficulties . . . . .	4-23	4-20
Steam pressure pumping systems . . . . .	4-24	4-21
Section VI. Vacuum Pumps		
General . . . . .	4-25	4-22
Installation . . . . .	4-26	4-23
Controls . . . . .	4-27	4-24
Initial operation and cleaning . . . . .	4-28	4-25
Maintenance . . . . .	4-29	4-26
Typical operating difficulties . . . . .	4-30	4-26
Section VII. Water Level Regulators and Controls		
General . . . . .	4-31	4-28
Installation . . . . .	4-32	4-28
Initial operation and servicing . . . . .	4-33	4-29
Operation and maintenance . . . . .	4-34	4-29
Typical operating difficulties . . . . .	4-35	4-29
Section VIII. Boiler Trimmings, Gauges, Pop Safety Valves		
General . . . . .	4-36	4-33
Gauge glass breakage . . . . .	4-37	4-33
Installing gauge glasses . . . . .	4-38	4-33
Testing and care . . . . .	4-39	4-33
Steam pressure gauges . . . . .	4-40	4-33
Safety valves . . . . .	4-41	4-33
Blow-down pipes . . . . .	4-42	4-34
Dampers . . . . .	4-43	4-34
Section IX. Traps		
General . . . . .	4-44	4-34
Thermostatic traps . . . . .	4-45	4-34
Float and thermostatic traps and bucket traps . . . . .	4-46	4-36

	Paragraph	Page
Section X. Air Vents		
General . . . . .	4-47	4-38
Installation and operation . . . . .	4-48	4-38
Maintenance . . . . .	4-49	4-38
Typical operating difficulties . . . . .	4-50	4-39
Section XI. Steam Radiators		
General . . . . .	4-51	4-39
Installation . . . . .	4-52	4-39
Initial operation and cleaning . . . . .	4-53	4-39
Typical operating difficulties . . . . .	4-54	4-39
Section XII. Steam Unit Heaters		
General . . . . .	4-55	4-39
Installation . . . . .	4-56	4-42
Maintenance . . . . .	4-57	4-43
Typical operating difficulties . . . . .	4-58	4-43
Section XIII. Steam Heating Coils		
General . . . . .	4-59	4-43
Installation . . . . .	4-60	4-43
Initial operation and cleaning . . . . .	4-61	4-44
Maintenance . . . . .	4-62	4-44
Typical operating difficulties . . . . .	4-63	4-44
Section XIV. Steam Humidifiers		
General . . . . .	4-64	4-44
Installation of duct type humidifiers . . . . .	4-65	4-44
Installation of unit humidifiers . . . . .	4-66	4-45
Section XV. Pressure Reducing Valves		
Types . . . . .	4-67	4-45
Installation and initial operation . . . . .	4-68	4-46
Operation and maintenance . . . . .	4-69	4-47
Typical operating difficulties . . . . .	4-70	4-48
Section XVI. General Procedures for Operation and Maintenance		
General . . . . .	4-71	4-48
Valves and piping . . . . .	4-72	4-48
Water level . . . . .	4-73	4-48
Combustion equipment and controls . . . . .	474	4-48
Boiler structure . . . . .	4-75	4-49
Housekeeping . . . . .	4-76	4-49
Section XVII. Typical Steam Heating Operating Difficulties		
Water line fluctuation . . . . .	4-77	4-49
Low water level . . . . .	4-78	4-49
Loss of pressure . . . . .	4-79	4-49
Pounding in the system . . . . .	4-80	4-50
Heating unit malfunction . . . . .	4-81	4-50
Failure of space to heat . . . . .	4-82	4-50
Pump venting steam . . . . .	4-83	4-50
Pump venting water . . . . .	4-84	4-50
Steel boiler failure . . . . .	4-85	4-51
Cast iron boiler failure . . . . .	4-86	4-51
Boiler room smoke . . . . .	4-87	4-51
Section XVIII. Summer Lay-up Procedures		
General . . . . .	4-88	4-52
Draining system . . . . .	4-89	4-52
Boiler cleaning and lay up . . . . .	4-90	4-52
Stokers . . . . .	4-91	4-53
Oil burners . . . . .	4-92	4-54
Gas burners . . . . .	4-93	4-54
Pumps . . . . .	4-94	4-54
Valves and strainers . . . . .	4-95	4-54
Traps . . . . .	4-96	4-54
Controls and electrical connections . . . . .	4-97	4-55
Stack and breeching . . . . .	4-98	4-55

	<i>Paragraph</i>	<i>Page</i>
Section XIX. Energy Conservation		
Isolate off-line boilers . . . . .	4-99	4-55
Maintenance of pipe and boiler insulation . . . . .	4-100	4-56
Steam trap leak detection . . . . .	4-101	4-56
CHAPTER 5. HOT WATER HEATING SYSTEMS		
Section I. Gravity Systems		
General . . . . .	5-1	5-1
Equipment . . . . .	5-2	5-1
Startup . . . . .	5-3	5-2
Water level . . . . .	5-4	5-2
Inspection and maintenance . . . . .	5-5	5-2
Section II. Forced Circulation Systems		
General . . . . .	5-6	5-2
Equipment . . . . .	5-7	5-3
Piping systems . . . . .	5-8	5-4
Inspection and maintenance . . . . .	5-9	5-5
Section III. Hot Water Fan-Coil Units		
General . . . . .	5-10	5-6
Fan coil capacity control . . . . .	5-11	5-7
Electrical requirements . . . . .	5-12	5-7
Maintenance . . . . .	5-13	5-8
Section IV. Heat Exchangers		
General . . . . .	5-14	5-8
Installation . . . . .	5-15	5-8
Operation . . . . .	5-16	5-9
Maintenance . . . . .	5-17	5-9
Section V. Energy Conservation		
Hot water temperature reduction . . . . .	5-18	5-9
Night setback . . . . .	5-19	5-10
CHAPTER 6. WARM AIR SYSTEMS		
Section I. Description of Systems		
Warm air furnaces . . . . .	6-1	6-1
Gravity warm-air heating systems . . . . .	6-2	6-1
Forced warm-air heating systems . . . . .	6-3	6-2
Ratings of warm air furnaces . . . . .	6-4	6-4
Section II. Coal Fired Warm Air Furnaces		
Steel furnaces . . . . .	6-5	6-4
Cast iron furnaces . . . . .	6-6	6-5
Ratings and sizes . . . . .	6-7	6-5
Smokepipe . . . . .	6-8	6-5
Motor damper . . . . .	6-9	6-7
Chimney . . . . .	6-10	6-7
Section III. Oil-Fired Warm Air Furnaces		
General description . . . . .	6-11	6-8
Oil furnaces . . . . .	6-12	6-8
Oil-conversion furnace . . . . .	6-13	6-8
Section IV. Gas-Fired Warm Air Furnaces		
General . . . . .	6-14	6-12
Construction . . . . .	6-15	6-15
Furnace rating . . . . .	6-16	6-15
Central furnaces . . . . .	6-17	6-15
Vertical furnaces (hi-boy type) . . . . .	6-18	6-15
Horizontal furnaces . . . . .	6-19	6-16
Gas conversion furnaces . . . . .	6-20	6-17
Fully condensing furnaces . . . . .	6-21	6-18
Fully condensing furnace maintenance . . . . .	6-22	6-19
Pulse Combustion furnaces . . . . .	6-23	6-20
Pulse combustion furnace maintenance . . . . .	6-24	6-20
Automatic vent dampers . . . . .	6-25	6-21

	<i>Paragraph</i>	<i>Page</i>
Section V. Gas-Fired Unit Heaters		
General . . . . .	6-26	6-22
Description . . . . .	6-27	6-22
Operation . . . . .	6-28	6-22
Installation . . . . .	6-29	6-23
Section VI. Infrared Heaters		
Gas-fired infrared heaters . . . . .	6-30	6-24
Electric infrared heaters . . . . .	6-31	6-25
Oil-fired infrared heaters . . . . .	6-32	6-26
Precautions . . . . .	6-33	6-26
Maintenance . . . . .	6-34	6-27
Section VII. Operating and Maintenance Procedures		
General . . . . .	6-35	6-27
Blower and motor maintenance . . . . .	6-36	6-27
Air filter maintenance . . . . .	6-37	6-29
Humidifiers . . . . .	6-38	6-29
Blower and limit controls . . . . .	6-39	6-33
Troubleshooting . . . . .	6-40	6-33
Section VIII. Energy Conservation		
Space temperature setback . . . . .	6-41	6-34
Maintenance of duct insulation . . . . .	6-42	6-35
CHAPTER 7. AUTOMATIC CONTROLS		
Section I. General		
Types of controls and control systems . . . . .	7-1	7-1
Thermostats . . . . .	7-2	7-1
Primary controls . . . . .	7-3	7-1
Limit controls and safeties . . . . .	7-4	7-1
Section II. Operation and Maintenance		
General . . . . .	7-5	7-1
Thermostats . . . . .	7-6	7-2
Hand fired coal primary controls . . . . .	7-7	7-3
Coal stoker primary controls . . . . .	7-8	7-4
Oil burner primary controls . . . . .	7-9	7-4
Gas burner primary controls . . . . .	7-10	7-5
Limit controls . . . . .	7-11	7-8
Safety pilot and pilotstat . . . . .	7-12	7-10
Auxiliary controls . . . . .	7-13	7-10
APPENDIX A. RELATED PUBLICATIONS . . . . .		A-1
Appendix B. TROUBLESHOOTING UNDERFEED STOKERS . . . . .		B-1
Appendix C. TROUBLESHOOTING STEAM PRESSURE PUMPING SYSTEMS . . . . .		C-1
BIBLIOGRAPHY. . . . .		Bibliography-1
GLOSSARY. . . . .		Glossary-1
INDEX. . . . .		I-1

**List of Figures**

<i>Figure No.</i>	<i>Title</i>	<i>Page</i>
2-1.	Inside or elevated outside oil tank installation . . . . .	2-2
2-2.	Buried oil tank installation . . . . .	2-3
2-3.	Typical LPG installation . . . . .	2-6
3-1.	Single retort screw feed stoker . . . . .	3-1
3-2.	Grates for updraft furnaces . . . . .	3-3
3-3.	Downdraft furnace . . . . .	3-4
3-4.	Pressure atomizing gun type oil burner . . . . .	3-6
3-5.	Air atomizing gun type burner . . . . .	3-7
3-6.	Operating principles of low pressure gun type burner . . . . .	3-8
3-7.	Horizontal rotary oil burner . . . . .	3-9
3-8.	Settings of ignition points and nozzle for oil burners . . . . .	3-12
3-9.	Typical fuel oil piping . . . . .	3-14
3-10.	Automatic oil shut-off valve . . . . .	3-15
3-11.	Individual low pressure gas burner . . . . .	3-16
3-12.	Assembly of low pressure gas/oil burner . . . . .	3-16
3-13.	Typical installation of low pressure gas burner . . . . .	3-17

List of Figures—Continued

<i>Figure No.</i>	<i>Title</i>	<i>Page</i>
3-14.	Register burner (gas orifices centered in air stream) . . . . .	3-18
3-15.	Register burner (gas manifold dividing air stream) . . . . .	3-18
3-16.	Register burner (gas orifices outside air stream) . . . . .	3-18
3-17.	Typical fuel gas piping . . . . .	3-20
3-18.	Combustion efficiency chart . . . . .	3-22
3-19.	Typical heat load distribution . . . . .	3-23
4-1.	Gravity one-pipe vent system . . . . .	4-2
4-2.	Angle radiator valve . . . . .	4-2
4-3.	Automatic air vent . . . . .	4-3
4-4.	Barometric draft control . . . . .	4-3
4-5.	Two-pipe vapor system with return trap . . . . .	4-4
4-6.	Two-pipe vacuum system with vacuum pump . . . . .	4-7
4-7.	Positive displacement type vacuum pump . . . . .	4-7
4-8.	Centrifugal type vacuum pump . . . . .	4-8
4-9.	Sectional cast iron steam boiler . . . . .	4-9
4-10.	Firebox boiler . . . . .	4-11
4-11.	Horizontal return tubular boiler . . . . .	4-12
4-12.	Scotch type package unit boiler . . . . .	4-13
4-13.	Bent water-tube boiler . . . . .	4-14
4-14.	Hartford loop . . . . .	4-15
4-15.	Boiler return traps . . . . .	4-17
4-16.	Centrifugal pump and receiver set . . . . .	4-18
4-17.	Steam pressure pumping . . . . .	4-22
4-18.	Single vacuum pump installation . . . . .	4-23
4-19.	Single vacuum pump installation with accumulator tank . . . . .	4-24
4-20.	Water level regulator connections . . . . .	4-29
4-21.	Boiler water feeder piping connections . . . . .	4-29
4-22.	Boiler water feeder details . . . . .	4-31
4-23.	Stoppage area in boiler connection . . . . .	4-32
4-24.	Thermostatic trap (bellows type) . . . . .	4-34
4-25.	Thermostatic traps (diaphragm type) . . . . .	4-35
4-26.	Float and thermostatic (F & T) trap . . . . .	4-37
4-27.	Horizontal-blow unit heater . . . . .	4-40
4-28.	Vertical-blow unit heater . . . . .	4-41
4-29.	Floor mounted unit heater . . . . .	4-42
4-30.	Double-seated diaphragm pressure reducing valve . . . . .	4-46
4-31.	Steam pressure reducing station . . . . .	4-47
4-32.	Warm-up bypasses for a secured boiler . . . . .	4-56
4-33.	Steam trap test valve set-up . . . . .	4-57
5-1.	Open tank gravity system . . . . .	5-1
5-2.	Closed tank gravity system . . . . .	5-2
5-3.	Forced circulation system . . . . .	5-3
5-4.	Two-pipe distribution system . . . . .	5-4
5-5.	Series loop distribution system . . . . .	5-5
5-6.	Typical fan-coil unit . . . . .	5-6
5-7.	Typical fan-coil unit arrangements . . . . .	5-7
6-1.	Simple gravity warm air heating system . . . . .	6-1
6-2.	Forced warm air heating system . . . . .	6-2
6-3.	Central fan heating system . . . . .	6-3
6-4.	Perimeter loop delivery system . . . . .	6-3
6-5.	Coal fired steel forced warm air furnace . . . . .	6-4
6-6.	Draft control for anthracite coal furnace . . . . .	6-6
6-7.	Draft control for bituminous coal furnace . . . . .	6-7
6-8.	Typical oil fired furnace . . . . .	6-8
6-9.	Typical firepot construction . . . . .	6-8
6-10.	Round firepot . . . . .	6-9
6-11.	Square firepot . . . . .	6-10
6-12.	Wiring diagram, gravity furnace, constant ignition . . . . .	6-11
6-13.	Wiring diagram, forced air furnace, constant ignition . . . . .	6-12
6-14.	Gas fired central furnace . . . . .	6-13

List of Figures—Continued

<i>Figure No.</i>	<i>Title</i>	<i>Page</i>
6-15.	Gas fired elevated upflow furnace .....	6-14
6-16.	Duct type furnace .....	6-14
6-17.	Gas fired elevated downflow furnace .....	6-15
6-18.	Installation of a typical duct furnace .....	6-16
6-19.	Damper arrangement for duct furnace and cooling coil .....	6-17
6-20.	Draft hood .....	6-18
6-21.	Typical fully condensing furnace .....	6-19
6-22.	Pulse combustion process .....	6-20
6-23.	Gas fired unit heater .....	6-22
6-24.	Unit heater heat zone length .....	6-23
6-25.	Typical unit heater installation .....	6-24
6-26.	Gas fired infrared burners .....	6-25
6-27.	Electric infrared heating elements .....	6-26
6-28.	Fan bearing, pulley and belt adjustments .....	6-28
6-29.	Direct drive blower .....	6-29
6-30.	Pan type humidifier .....	6-30
6-31.	Centrifugal atomizer humidifier .....	6-31
6-32.	Steam spray humidifier .....	6-32
6-33.	Steam jacketed manifold humidifier .....	6-33
7-1.	Metal element thermostat .....	7-2
7-2.	Mercury switch thermostat .....	7-3
7-3.	Coal furnace primary control wiring .....	7-4
7-4.	Oil burner primary control wiring .....	7-5
7-5.	Gas burner primary control wiring .....	7-6
7-6.	Magnetic diaphragm gas valve .....	7-7
7-7.	Motorized gas valve .....	7-8
7-8.	Combination fan and limit control .....	7-8
7-9.	Immersion aquastat installation in hot water boiler .....	7-9
7-10.	Immersion aquastat installation in vertical riser .....	7-9
7-11.	Pressure control for steam boiler .....	7-10
7-12.	Pressure control on T-mounting .....	7-10

List of Tables

<i>Table No.</i>	<i>Title</i>	<i>Page</i>
2-1.	Heating value of typical coals .....	2-1
3-1.	Nozzle selection chart for No. 2 oil .....	3-11
6-1.	Recommended firebox sizes .....	6-9